

Interface Description

ServiceTd_SOAP



Revision date: 25.08.2021

TecAlliance GmbH

Contents

Module Details

1. ServiceTd

ObjectModel

1. GetTdAllTyresForTypeHtmlMsg
2. GetTdAllTyresForTypeMsg
3. GetTdTyresMsg
4. GetTdTyreTypesHtmlMsg
5. GetTdTyreTypesMsg
6. GetVehicleHasTdMsg
7. TdTyre
8. TdTyreType

Module Details

1. ServiceTd

1.1. General Remarks

The webservice methods uses message classes as parameter value. All these classes are derived from the base class `AisService._40.Messages.BaseMsg` and contains properties for the data which are necessary for calling the web service method. To calling a method create an instance of their message class, set the necessary data to the message class properties and pass it throw the web service method.

All methods require the "**CompanyName**", "**UserName**" and "**Password**" properties, containing the application-specific access parameters.

Some methods require the `LanguageCode` properties, a 2-letter message internationalization language code as defined by ISO 639-1. All text messages will be returned in the defined language. Only language codes returned by `GetLanguages(...)` in the TecRMI common webservice are valid.

Some methods require the `CountryCode` properties, a 2-letter data internationalization country code as defined by ISO 3166-1. All application data will be returned as it is available for this country. Only county codes returned by `GetCountries(...)` in the TecRMI common webservice are valid.

Some methods require the `ConsumerId` property. To this a unique value, which identifiers the customers users which uses the TecRMI webservice by the customers application has to be passed. The length of the `ConsumerId` property value is restricted to 50 characters and is used for access control and billing.

All methods send an error message if an exception occurred or the access to the web service was denied.

All methods that are documented to return a list return an array instead.

1.2. Web service URL's

web service URL:

<https://rmi-services.tecalliance.net/soap/ServiceTd.asmx>

URL of WSDL file:

<https://rmi-services.tecalliance.net/soap/ServiceTd.asmx?wsdl>

1.3. Sequence Of Calls

First of all, check if your vehicle has tyre data using [GetVehicleHasTd](#) . To get a listing of available ABEs, KBAs and VSNs for your type id, call [GetTyreTypes](#) . To get information for a special ABE, call [GetTyres](#) . Call method [GetAllTyresForType](#) when a list of all tyre which are available for the vehicle is needed. The HTML version of the list of all tyres can be fetched by calling the web service method [GetAllTyresForTypeHtml](#) .

1.4. Summary

Class `ServiceTd` provides the web service methods for the part tyre data.

1.5. Detailed Module Documentation

1.5.1. Methods

- **bool GetVehicleHasTd(GetVehicleHasTdMsg input)**

Checks whether the vehicle has tyre data.

Parameter

input - Instance of the message class GetVehicleHasTdMsg

Returns

true - if tyre data exists; otherwise false.

- **List<TdTyre> GetTdAllTyresForType(GetTdAllTyresForTypeMsg input)**

Gets all the tyres for the selected typeId.

Parameter

input - Instance of the message class GetTdAllTyresForTypeMsg

Returns

All the tyres.

- **string GetTdAllTyresForTypeHtml(GetTdAllTyresForTypeHtmlMsg input)**

Gets all the tyres for the selected typeId as a HTML-string.

Parameter

input - Instance of the message class GetAllTyresForTypeHtml

Returns

A HTML-string.

- **List<TdTyreType> GetTdTyreTypes(GetTdTyreTypesMsg input)**

Retrieves all tyre types available with all known tyre types and corresponding ABE (general operating license), KBA (german federal motor transport authority) or VSN (part of the kba number) for the given TecRMI vehicle type id.

Parameter

input - Instance of the message class GetTdTyreTypesMsg

Returns

A collection of the tyre types.

- **List<TdTyre> GetTdTyres(GetTdTyresMsg input)**

Retrieves all tyre data available for a given tyre type id to generate a tyre data sheet.

Parameter

input - Instance of the message class GetTdTyresMsg.

Returns

The available tyre data.

- string GetTdTyreTypesHtml(GetTdTyreTypesHtmlMsg input)

Retrieves all tyre data available for a given tyre type id and generate a HTML string.

Parameter

input - Instance of the message class GetTdTyreTypesHtmlMsg

Returns

A HTML-string.

Object Model

1. GetTdAllTyresForTypeHtmlMsg

1.1. Summary

Class [AisService._40.Messages.Td.GetTdAllTyresForTypeHtmlMsg](#) contains the properties which are necessary to call web service method [GetTdAllTyresForTypeHtml](#) .

1.2. See also

[ServiceTd.GetTdAllTyresForTypeHtml\(...\)](#)

1.3. Detailed Module Documentation

1.3.1. Properties

- **string CompanyName**

Gets or sets the name of the company.

Property-Value

The name of the company.

- **string ConsumerId**

Unique identifier for end user which receive the called data.

Property-Value

Unique end user identifier.

- **string CountryCode**

Gets or sets the 2-letter international country code as defined by ISO 3166-1.

Property-Value

The ISO country code.

- **string LanguageCode**

Gets or sets the 2-letter international language code as defined by ISO 639-1.

Property-Value

The ISO language code.

- **string Password**

Gets or sets the password.

Property-Value

The password.

- **string UserName**

Gets or sets the name of the user.

Property-Value

The name of the user.

- int TypeID

Gets or sets the TecRMI type id which identifies a vehicle unique.

The id can be fetched by using the ServiceVt web service.

Property-Value

The TecRMI type id.

2. GetTdAllTyresForTypeMsg

2.1. Summary

Class [AisService._40.Messages.Td.GetTdAllTyresForTypeMsg](#) contains the properties which are necessary to call web service method [GetTdAllTyresForType](#) .

2.2. See also

[ServiceTd.GetTdAllTyresForType\(...\)](#)

2.3. Detailed Module Documentation

2.3.1. Properties

- string CompanyName

Gets or sets the name of the company.

Property-Value

The name of the company.

- string ConsumerId

Unique identifier for end user which receive the called data.

Property-Value

Unique end user identifier.

- string CountryCode

Gets or sets the 2-letter international country code as defined by ISO 3166-1.

Property-Value

The ISO country code.

- string LanguageCode

Gets or sets the 2-letter international language code as defined by ISO 639-1.

Property-Value

The ISO language code.

- string Password

Gets or sets the password.

Property-Value

The password.

- string UserName

Gets or sets the name of the user.

Property-Value

The name of the user.

- int TypeID

Gets or sets the TecRMI type id which identifies a vehicle unique.

The id can be fetched by using the ServiceVt web service.

Property-Value

The TecRMI type id.

3. GetTdTyresMsg

3.1. Summary

Class [AisService._40.Messages.Td.GetTdTyresMsg](#) contains the properties which are necessary to call web service methods [GetTdTyres](#) .

3.2. See also

[ServiceTd.GetTdTyres\(...\)](#)

3.3. Detailed Module Documentation

3.3.1. Properties

- string CompanyName

Gets or sets the name of the company.

Property-Value

The name of the company.

- string ConsumerId

Unique identifier for end user which receive the called data.

Property-Value

Unique end user identifier.

- string CountryCode

Gets or sets the 2-letter international country code as defined by ISO 3166-1.

Property-Value

The ISO country code.

- string LanguageCode

Gets or sets the 2-letter international language code as defined by ISO 639-1.

Property-Value

The ISO language code.

- string Password

Gets or sets the password.

Property-Value

The password.

- int TyreTypeId

Gets or sets the id of the tyre whose data should be called. This id can be fetched by calling the web service method `GetTdTyreTypes(...)`

Property-Value

The tyre type id.

- string UserName

Gets or sets the name of the user.

Property-Value

The name of the user.

4. GetTdTyreTypesHtmlMsg

4.1. Summary

Class [AisService._40.Messages.Td.GetTdTyreTypesHtmlMsg](#) contains the properties which are necessary to call web service method [GetTdTyreTypesHtml](#) .

4.2. See also

[ServiceTd.GetTdTyreTypesHtml\(...\)](#)

4.3. Detailed Module Documentation

4.3.1. Properties

- string CompanyName

Gets or sets the name of the company.

Property-Value

The name of the company.

- string ConsumerId

Unique identifier for end user which receive the called data.

Property-Value

Unique end user identifier.

- string CountryCode

Gets or sets the 2-letter international country code as defined by ISO 3166-1.

Property-Value

The ISO country code.

- string LanguageCode

Gets or sets the 2-letter international language code as defined by ISO 639-1.

Property-Value

The ISO language code.

- string Password

Gets or sets the password.

Property-Value

The password.

- int TyreTypeId

Gets or sets the id of the tyre whose data should be called. This id can be fetched by calling the web service method `GetTdTyreTypes(...)`

Property-Value

The tyre type id.

- string UserName

Gets or sets the name of the user.

Property-Value

The name of the user.

- int TypeID

Gets or sets the TecRMI type id which identifies a vehicle unique.

The id can be fetched by using the `ServiceVt` web service.

Property-Value

The TecRMI type id.

5. GetTdTyreTypesMsg

5.1. Summary

Class [AisService._40.Messages.Td.GetTdTyreTypesMsg](#) contains the properties which are necessary to call web service method [GetTdTyreTypes](#) .

5.2. See also

[ServiceTd.GetTdTyreTypes\(...\)](#)

5.3. Detailed Module Documentation

5.3.1. Properties

- **string CompanyName**

Gets or sets the name of the company.

Property-Value

The name of the company.

- **string CountryCode**

Gets or sets the 2-letter international country code as defined by ISO 3166-1.

Property-Value

The ISO country code.

- **string LanguageCode**

Gets or sets the 2-letter international language code as defined by ISO 639-1.

Property-Value

The ISO language code.

- **string Password**

Gets or sets the password.

Property-Value

The password.

- **string UserName**

Gets or sets the name of the user.

Property-Value

The name of the user.

- **int TypeID**

Gets or sets the TecRMI type id which identifies a vehicle unique.

The id can be fetched by using the ServiceVt web service.

Property-Value

The TecRMI type id.

6. GetVehicleHasTdMsg

6.1. Summary

Class [AisService._40.Messages.Td.GetVehicleHasTdMsg](#) contains the properties which are necessary to call the web service module check method [ServiceTd.GetVehicleHasTd](#) .

6.2. See also

[ServiceTd.GetVehicleHasTd\(...\)](#)

6.3. Detailed Module Documentation

6.3.1. Properties

- **string** **CompanyName**

Gets or sets the name of the company.

Property-Value

The name of the company.

- **string** **CountryCode**

Gets or sets the 2-letter international country code as defined by ISO 3166-1.

Property-Value

The ISO country code.

- **string** **Password**

Gets or sets the password.

Property-Value

The password.

- **string** **UserName**

Gets or sets the name of the user.

Property-Value

The name of the user.

- **int** **TypeID**

Gets or sets the TecRMI type id which identifies a vehicle unique.

The id can be fetched by using the ServiceVt web service.

Property-Value

The TecRMI type id.

7. TdTyre

7.1. Summary

Represents a tyre for the tyre data part of the AuDaLib.

7.2. Detailed Module Documentation

7.2.1. Properties

- string ApplicationText

Gets or sets the application text.

Property-Value

The application text.

- string FrontRimSize

Gets or sets the size of the front rim.

Property-Value

The size of the front rim.

- string FrontTyreSize

Gets or sets the size of the front tyre.

Property-Value

The size of the front tyre.

- bool HsnTsnVsnSelectionRequired

Gets or sets a value indicating whether the user has to select a HSN/TSN/VSN combination.

Remarks

The combination of HSN/TSN/VSN identifies a specific vehicle. The particular constituents are:

HSNManufacturer key number (german: Herstellerschlüsselnummer) is a four digit code which identifies a manufacturer of a vehicle. TSNTyre key number (german: Typschlüsselnummer) is a three digit code which identifies the range of a vehicle. VSNVersion key number (german: Versionschlüsselnummer) is a five digit code which identifies the version or the variant of a vehicle type.

Property-Value

true if this tyre requires an HSN/TSN/VSN selection; otherwise, false.

- string InfoText

Gets or sets the info text.

Property-Value

The info text.

- string RearRimSize

Gets or sets the size of the rear rim.

Property-Value

The size of the rear rim.

- string RearTyreSize

Gets or sets the size of the rear tyre.

Property-Value

The size of the rear tyre.

8. TdTyreType

8.1. Summary

Represents a tyre type for TD.

8.2. Detailed Module Documentation

8.2.1. Properties

- **string Abe**

Gets or sets the general operating permit (german: Allgemeine Betriebserlaubnis).

Property-Value

The general operating permit (german: Allgemeine Betriebserlaubnis).

- **string HsnTsn**

Gets or sets the HSN (manufacturer key number [german: Herstellerschlüsselnummer]) / TSN (type key number [german: Typschlüsselnummer]).

Property-Value

The HSN (manufacturer key number) / TSN (type key number).

- **int TypeTypeId**

Gets or sets the tyre type id.

Property-Value

The tyre type id.

- **string Vsn**

Gets or sets the VSN (version key number [german: Variantenschlüsselnummer]).

Property-Value

The VSN (version key number [german: Variantenschlüsselnummer]).